


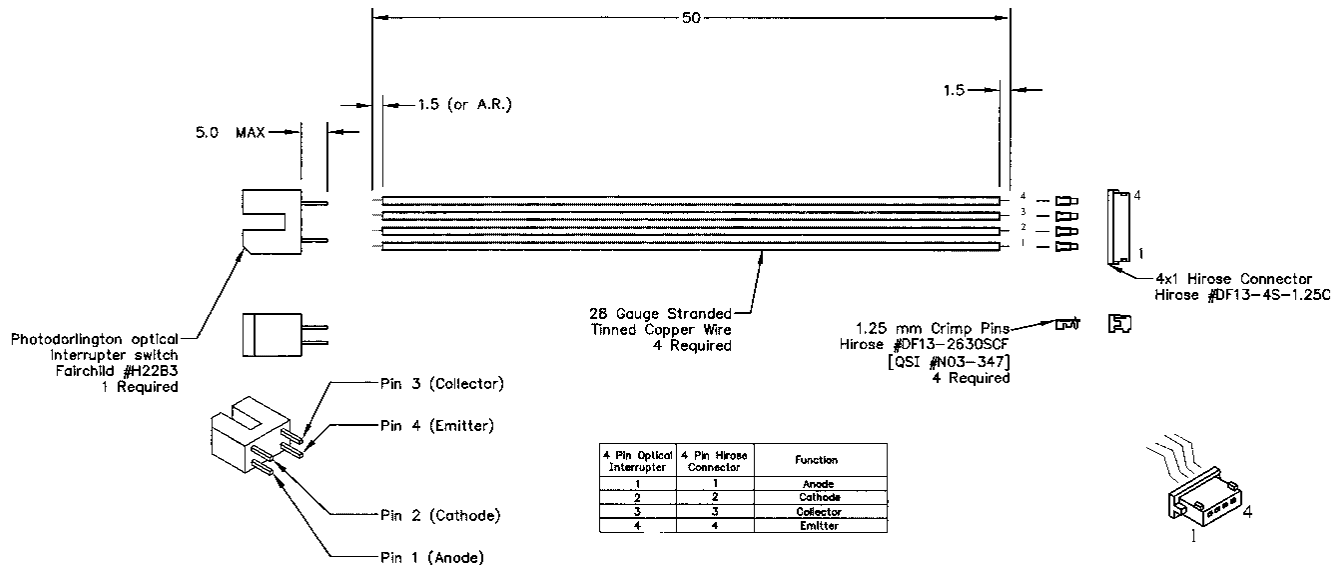

Notes:

1. Cut cable to length and strip wire as shown.
2. Crimp pins on wire ends & insert into housing as shown using wiring table for reference.
3. Wiring to optical interrupter to be soldered and protected using heat shrink tubing to cover all exposed metal and provide strain relief.
4. All materials to be RoHS compliant.

This print is NOT to scale!

Rev.	Date	By	Description	
HO CHIEN			PN#	CA-C5035-0004
www.hochien.com			C046 Label Sensor Wiring	
Dimensions in Millimeters $\begin{matrix} <150 \text{ mm} \\ >150 \text{ mm} \end{matrix} \begin{cases} X = 13.5 \\ X.X = 13.2 \end{cases}$ $\begin{cases} X = 13.8 \\ X.X = 13.4 \end{cases}$ All angles $\pm 0.5^\circ$			Rev 1	sga
			3 May 06	N04-742